

Multi-Bucket Systems

Multi-Bucket Systems for use with Contec's flat mops

Contec's Multi-Bucket System offers maximum flexibility and can be fitted with two or three buckets, in either stainless steel or polypropylene. An extendable frame pulls out of the front of the cart to accommodate an additional bucket. Each cart is fitted with quiet, easy to move casters that lock in place when needed. The utility handle allows for transportation of additional cleaning supplies. A hands-free mop removal tool is available for VertiKlean® MAX™ mop heads and the QuickTask™ mop heads. One mop holder with mop brace and handle clasp on the side of the cart keep the mop in position and allow for convenient mop storage during transport.


The system is compatible with stainless steel downpress wringer option to accommodate flat mops.

Autoclavable at 121° C for 30 minutes.



Features	Benefits
Specified handle accommodates flat mop wringer	<ul style="list-style-type: none"> Allows system to be used with Contec's VertiKlean MAX and QuickTask Mops
Removable handle	<ul style="list-style-type: none"> Makes for easier autoclaving and storage
Extendable cart for optional 3rd bucket	<ul style="list-style-type: none"> Cart extends to transform cart to three bucket system if needed for facility protocol
Improved castors and connections	<ul style="list-style-type: none"> Significantly reduces noise during use More durable attachments with less "rattle"

Part No.	Description	Size	Packaging
2707U2SF	Stainless Steel Multi-Bucket System Two 7 gallon (27 L) stainless steel buckets with utility handle	7 gallon (27 L)	1/case
2650U2PF	Polypropylene Multi-Bucket System Two 6.5 gallon (25 L) polypropylene buckets with utility handle and drip cap	6.5 gallon (25 L)	1/case
Wringer			
2756	Stainless Steel Downpress Wringer for flat mops	-	1/case
Accessories			
6046	VertiKlean MAX Hands-Free Mop Removal Tool	-	1/case
6047	QuickTask Hands-Free Mop Removal Tool	-	1/case
BNBG0001	Disposable bag for mop removal tool	-	80 bags/case
BNBG0002	Irradiated Disposable bag for mop removal tool	-	80 bags/case
2617	Stainless Steel Bucket Replacement bucket	7 gallon (27 L)	1/case
UBKT0001	Blue Polypropylene Bucket Replacement bucket	6.5 gallon (25 L)	1/case
UBKT0002	Red Polypropylene Bucket Replacement bucket	6.5 gallon (25 L)	1/case
UBKT0003	Gray Polypropylene Bucket Replacement bucket	6.5 gallon (25 L)	1/case
6026	Replacement Casters	-	

Product Information	
Materials of construction	
Cart	Stainless steel, type 304
Wringer	Stainless steel, type 304
Casters	Stainless steel frames with blue rubber autoclavable wheels
Finish	Electropolished
Buckets	Stainless steel, type 316, deep drawn Polypropylene copolymer
Packaging materials	Case (CS), corrugated fiberboard (PAP) 
Dimensions	35" x 27" x 41" (89 x 61 x 104 cm)
Wringers (sold separately)	2756 – Stainless Steel flat mop wringer (for VertiKlean®, VertiKlean® MAX™, and QuickTask™)

Recycle Symbols



- Notes**
- a) The data shown are typical values and should not be used as product specifications.
 - b) Valid product comparisons may only be obtained through side-by-side testing in the same test facility, under similar conditions.
 - c) Comparison testing of Contec products against similar competitive or incumbent products may be conducted upon special request. Please contact a Contec Sales Representative for more information.

Product Features

Quiet casters


Provide better performance on textured floors. All four casters lock, making it easier to use for cleaning and disinfecting.



Optional hands-free mop head removal tool: 6046

An optional hands-free removal tool is also available to use with the VertiKlean MAX and VertiKlean Sealed Edge mop heads. This stainless steel tool is easily installed on the back of the cart and includes a frame for holding disposal bags.


The waste bag holder can be used with sterile or nonsterile waste bags for complete hands free removal and disposal of dirty mop heads.

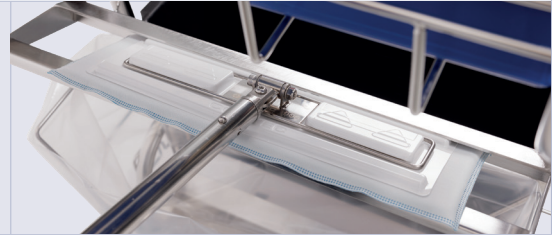

Optional hands-free mop head removal tool: 6047

An optional hands-free removal tool is also available to use with the range of QuickTask Mop Heads. This stainless steel tool is easily installed on the back of the cart and includes a frame for holding disposal bags.

The waste bag holder can be used with sterile or nonsterile waste bags for complete hands-free removal and disposal of dirty mop heads. In order to use this hands-free option, the QuickTask magnetic mop head frames must be used, 2906 (stainless steel) and 2699P (polypropylene).

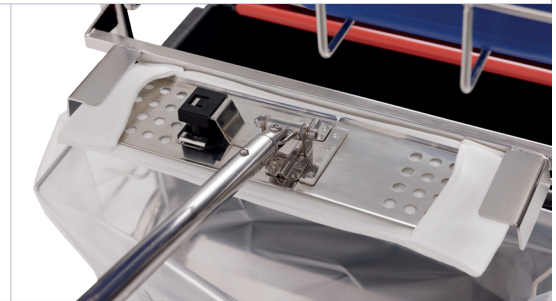

Integral mop holders

One mop holder with handle hook on the side of the cart allows for convenient mop storage during transport and storage.

