

Compact Bucket Systems

Versatile multiple bucket system for use with Contec's flat and curved mops

Contec's autoclavable Compact Bucket System is an all-in-one solution to make cleaning and disinfecting easier and more efficient. The cart is designed for use with Contec® mops such as the VertiKlean® MAX™, VertiKlean® MAX™ Sealed Edge, EasyCurve® and QuickTask™ Mopping Systems.

The stainless steel cart is available in multiple configurations to meet the unique needs of your environment. It is available with either two or three autoclavable buckets and a choice of a standard or utility cart handle. The utility handle allows two small buckets (1.6 gallon) or one large bucket (3.9 gallon) to be positioned on the handle providing additional storage for extra supplies such as clean mop heads, solution spray bottles, wipes, and other items as needed.

The cart frame has an integrated mop head removal tool on the front for easy, hands-free removal of a VertiKlean MAX or VertiKlean MAX Sealed Edge mop head. An optional hands-free removal tool is also available for both the VertiKlean MAX mop heads and the QuickTask mop heads. Two mop holders with handle clasps on either side of the cart allow for convenient mop storage during transport and storage.

The polypropylene buckets are provided with stainless steel debris screens. The screen is positioned in the base of the clean and rinse buckets and prevents the mop from touching the bottom of the bucket where unwanted contaminants settle.




Features	Benefits
On cart storage for two mop handles and frames	<ul style="list-style-type: none"> • Allows convenient storage of two mop handles and frames keeping mops out of the way • Keeps mops readily at hand when changing locations
Four rotating, lockable casters	<ul style="list-style-type: none"> • Provide excellent maneuverability, ideal for small cleanrooms and tight spaces
Compact polypropylene buckets with integral drip cap	<ul style="list-style-type: none"> • Keeps buckets in place while in use and prevents drips between the buckets and floor • Buckets can hold a curved or flat wringer for curved or flat mops
Integral mop head removal tool or optional hands-free mop head removal tool	<ul style="list-style-type: none"> • Allows easy hands-free removal of the VertiKlean MAX and QuickTask mop heads • Used mop heads can easily be discarded
100% autoclavable, electropolished stainless steel cart	<ul style="list-style-type: none"> • Safe for autoclave at 121°C for 30 minutes allowing it to be used in the most critical environments • Compatible with most cleanroom disinfectants and cleaners

Part No.	Description	Size	Packaging
2940P2B	Compact Bucket System Two polypropylene buckets with standard handle and debris screen	27.6" x 26.5" x 41" (70 x 67 x 104 cm)	1/case
2940U2B	Compact Bucket System Two polypropylene buckets with utility handle and debris screen	31.1" x 26.5" x 41" (79 x 67 x 104 cm)	1/case
2940P3B	Compact Bucket System Three polypropylene buckets, standard handle and two debris screens	30" x 26.5" x 41" (76 x 67 x 104 cm)	1/case
2940U3B	Compact Bucket System Three polypropylene buckets, utility handle with two utility buckets and two debris screens	31.1" x 26.5" x 41" (79 x 67 x 104 cm)	1/case
2940P3S	Compact Bucket System Three stainless steel buckets, standard handle	30" x 26.5" x 41" (76 x 67 x 104 cm)	1/case
Wringers			
2689	Stainless Steel Flat Wringer for polypropylene buckets	3.9 gallon (15 L)	1/case
2756	Stainless Steel Flat Downpress Wringer for polypropylene and stainless steel buckets	-	1/case
2690	Stainless Steel Curved Wringer for EasyCurve mops	-	1/case
Hands Free Mop Removal			
2639	VertiKlean MAX Hands-Free Mop Removal Tool For Compact Bucket System	-	1/case
2940	QuickTask Mop Removal Tool for Compact Bucket System	-	1/case
BNBG0001	Disposal bag for mop head removal tool	-	80/case
BNBG0002	Irradiated disposal bag for mop head removal tools	-	80/case
2906	QuickTask Magnetic Mop Frame Stainless steel	15.5" x 3.75" (40 x 10 cm)	1/case
2699P	QuickTask Magnetic Mop Frame Polypropylene	15.5" x 3.75" (40 x 10 cm)	1/case
Accessories and spares			
PB6B-3	Polypropylene utility bucket	1.6 gallon (6 L)	2/case
UBKT0008	Red, Blue, and Gray polypropylene buckets	3.9 gallon (15 L)	1 set/case
UBKT0009	Red and Gray polypropylene buckets	3.9 gallon (15 L)	1 set/case
2675	Stainless steel debris screen for polypropylene buckets	-	2/case
BKTBAG	Irradiated bucket liners 4 mil polyethylene Fits 5 gallon (20 L), 6.5 gallon (25 L), 7 gallon (27 L)	-	2/case; 20 bags/case
BKTBAG2	Irradiated bucket liners 4 mil polyethylene Fits 3.9 gallon (15 L)	-	3/case; 20 bags/case
2647	Blue caster, swivel with brake replacement	-	1/case
2693	Plastic handle holder clips	-	1/case

Product Information	
Packaging Materials	Case (CS), corrugated fiberboard (PAP) ♻️
Materials of construction	
Cart	Stainless steel, type 304
Handle Clips	Stainless steel
Wringer and Removal tools	Stainless steel, type 304 (sold separately)
Casters	Stainless steel frames with blue Kryptonite™ autoclavable wheels
Finish	Electropolished
Mop frames	(2906) Stainless steel, type 304 and (2699P) Polypropylene
Buckets	Polypropylene copolymer/stainless steel, type 316, deep drawn
Disposable Bags	Low-density polyethylene (LDPE) ♻️



2906

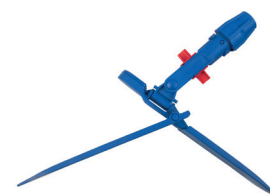

2699P

Recycle Symbols



Dimensions



2940P2B

Cart
26.4" x 26.5" x 41"
(67 x 67 x 104 cm)

Buckets
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)



2940U2B

Cart
27.6" x 26.5" x 41"
(70 x 67 x 104 cm)

Buckets
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)



2940P3B

Cart
30" x 26.5" x 41"
(76 x 67 x 104 cm)

Buckets:
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)



2940U3B

Cart
31.1" x 26.5" x 41"
(79 x 67 x 104 cm)

Buckets
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)

Utility buckets
7.1" x 9.3" x 9.3"
(18 x 23.5 x 23.5 cm)



2940P3S

Cart
30" x 26.5" x 41"
(76 x 67 x 104 cm)

Buckets
6.9" x 19.1" x 7.9"
(17.5 x 48.5 x 20 cm)

Product Features

Integral mop head removal tool

Each size of cart has an integral stainless steel mop head removal tool on the front for easy removal of a VertiKlean MAX or MAX Sealed Edge mop heads.



Optional hands-free mop head removal tool: 2639

An optional hands-free removal tool is also available to use with the VertiKlean MAX and VertiKlean SE mop heads. This stainless steel tool is easily installed on the back of the cart and includes a frame for holding disposal bags.


The waste bag holder can be used with sterile or nonsterile waste bags for complete hands free removal and disposal of dirty mop heads.



Optional hands-free mop head removal tool: 2940

An optional hands-free removal tool is also available to use with the range of QuickTask Mop Heads. This stainless steel tool is easily installed on the back of the cart and includes a frame for holding disposal bags.

The waste bag holder can be used with sterile or nonsterile waste bags for complete hands free removal and disposal of dirty mop heads. In order to use this hands-free option, the QuickTask magnetic mop head frames must be used, 2906 (stainless steel) and 2699P (polypropylene).

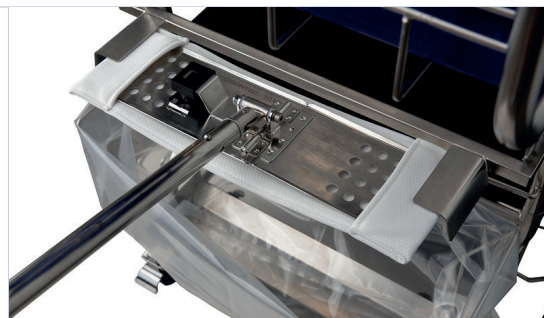

Integral mop holders

Two mop holders with handle clasps on either side of the cart allow for convenient mop storage during transport and storage.



Integral debris screens

The polypropylene buckets are provided with stainless steel debris screens. The screen is positioned in the base of the clean and rinse buckets and prevents the mop from touching the bottom of the bucket where unwanted contaminants settle.

