

# CONSTIX® Sealed Polyester Swab SP-8

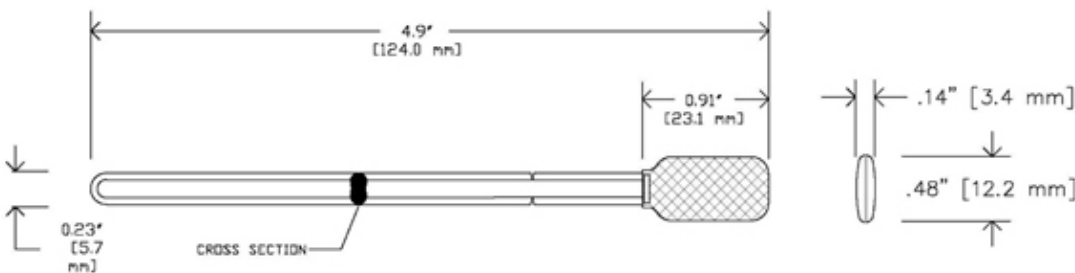
## Double layer sealed knitted polyester swab



CONSTIX® SP-8 sealed polyester swab consists of 100% knitted polyester fabric that is thermally bonded to a polypropylene handle with a large paddle tip. The swab head is made of cleanroom laundered, double layer knitted polyester material. The polyester head is constructed without adhesives or binders, which makes the swab compatible with most common solvents, such as alcohols and ketones. The SP-8 swab is durable, absorbent and features extremely low particles and residue levels.



Features	Benefits
Sealed polyester fabric	<ul style="list-style-type: none"> <li>• Provides enhanced sorbency, particle entrapment, and removal</li> <li>• Compatible with most common solvents, such as alcohols and ketones</li> </ul>
Large paddle swab head	<ul style="list-style-type: none"> <li>• Provides broader surface coverage in critical applications</li> </ul>

Part No.	Description	Size	Packaging
SP-8	CONSTIX Sealed polyester swab	Head dimension: 0.48" x 0.91" (12.2 x 23.1 mm) Handle diameter: 0.23" (5.7 mm) Total length: 4.9" (124.0 mm)	100/case



Product Information	
Head material	<ul style="list-style-type: none"> <li>Knitted polyester</li> </ul>
Handle material	<ul style="list-style-type: none"> <li>Polypropylene</li> </ul>
Construction	<ul style="list-style-type: none"> <li>Thermally sealed and attached</li> </ul>
Packaging materials	<ul style="list-style-type: none"> <li>Outer bags (OB1): low density polyethylene (LDPE) </li> <li>Case (CS): corrugated fiberboard (PAP) </li> </ul>

Recycle Symbols



Packaging	EA/BG	BG/CS	EA/CS
SP-8	100	1	100

EA = each; BG = bag; CS = case